


# Above Ground Pool Installation

## Freestanding Install Method

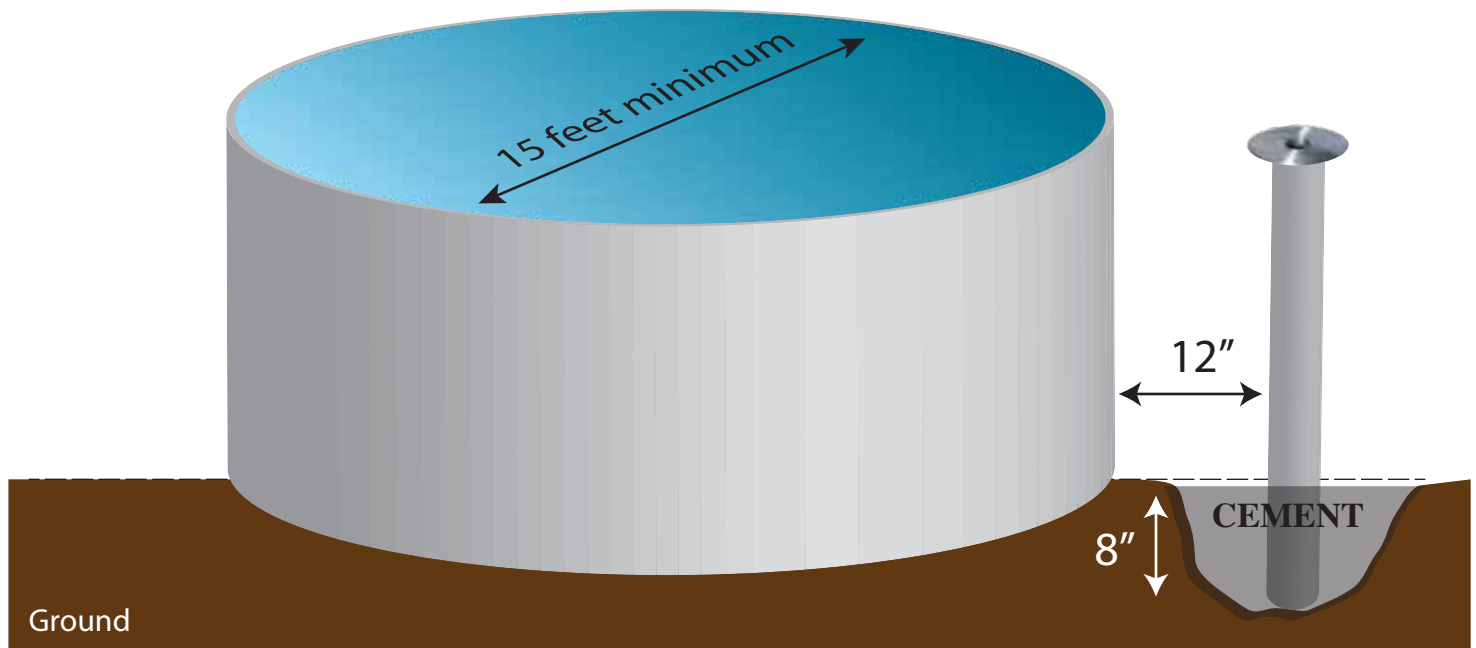

### REQUIRED TOOLS:

- Shovel
- Concrete / Cement
- Level (optional)

### INSTRUCTIONS:

1. Your above ground pool adapter will arrive fully built and ready for install.
2. Dig a 12" x 12" x 8" deep hole approximately 12" from the edge of your pool.
3. Pour enough concrete to fill the hole and position the PVC end of your above ground pool adapter in the center of the hole. You may have to wait a few minutes to allow the concrete to thicken enough to hold the base in place. Brace if necessary.
4. Allow concrete to completely cure before inserting the Swim Tether and swimming on it.

*Note: The PVC tubing contains a steel core for support. If cemented in place properly you should experience very little flex of the above ground base if any at all.*

**Swim safely and enjoy!**